



# LFT7000WM Wall mount lift stand

Thank you for purchasing AVFI's LFT7000WM lift stand.  
 This stand is designed for TV setups totaling up to 280lbs.  
 Confirm all hardware is included before you begin assembly.  
 Read these instructions start to finish before beginning installation.

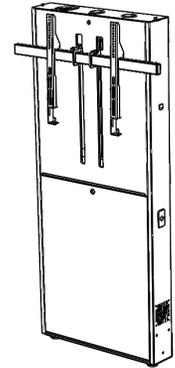


**Note:** If you cannot understand these instructions or are concerned about safety of the installation contact a qualified contractor or contact AVFI at 1-877-834-3876.


## Supplied Parts

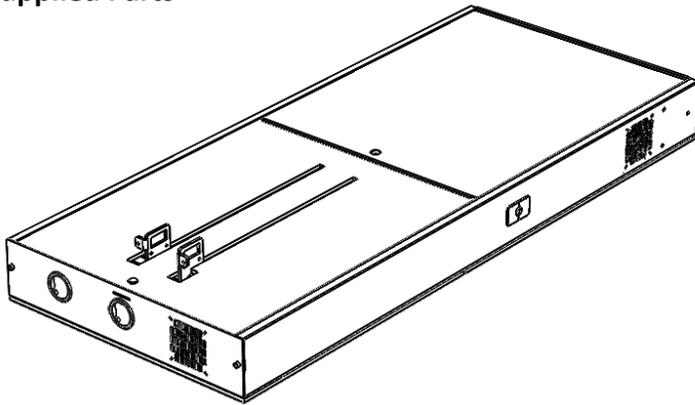


Tower  
Box 1

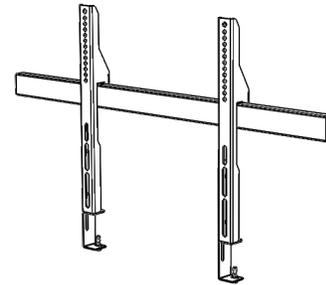

TV Brackets  
S (shown)/XL/D  
+ Tube.  
found inside Tower.



LFT-WM  
Hardware bag




TV Hardware bag  
x2 if dual mount

Not all hardware supplied will be used.

## Supplied Hardware (additional to hardware bags)



Allen Keys found  
In hardware bag



Keys  
(2)



## Tools required




Wrench or Socket set

## LFT7000WM Wall mount lift stand


- 1** Unlock and remove front panels.  
Remove brackets and hardware bags from inside.

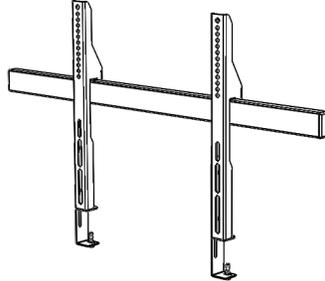

TV Brackets  
S (shown)/XL/D  
+ Tube.  
found inside unit.

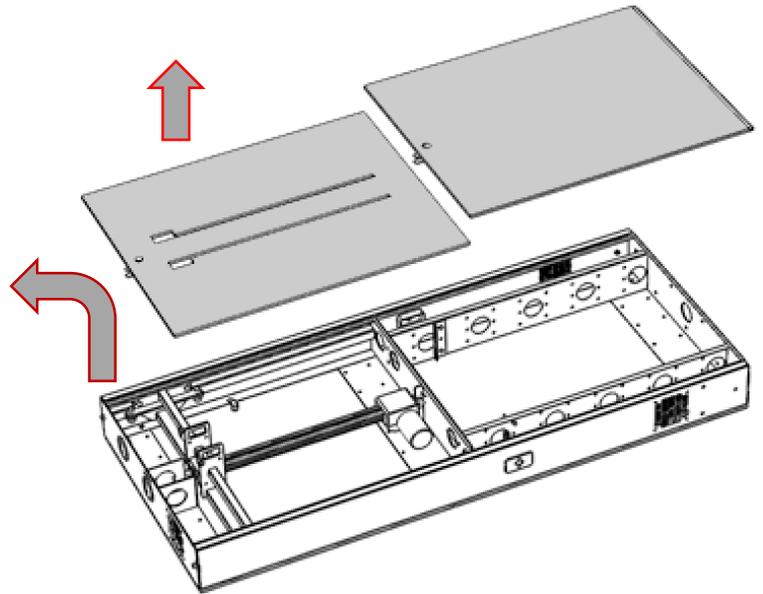

- 2** Find and mark studs if stud wall.  
Preferably over outlet.  
Position Tower with holes Lined up over stud centers.  
Level unit using adjustable feet.  
Mark hole locations.

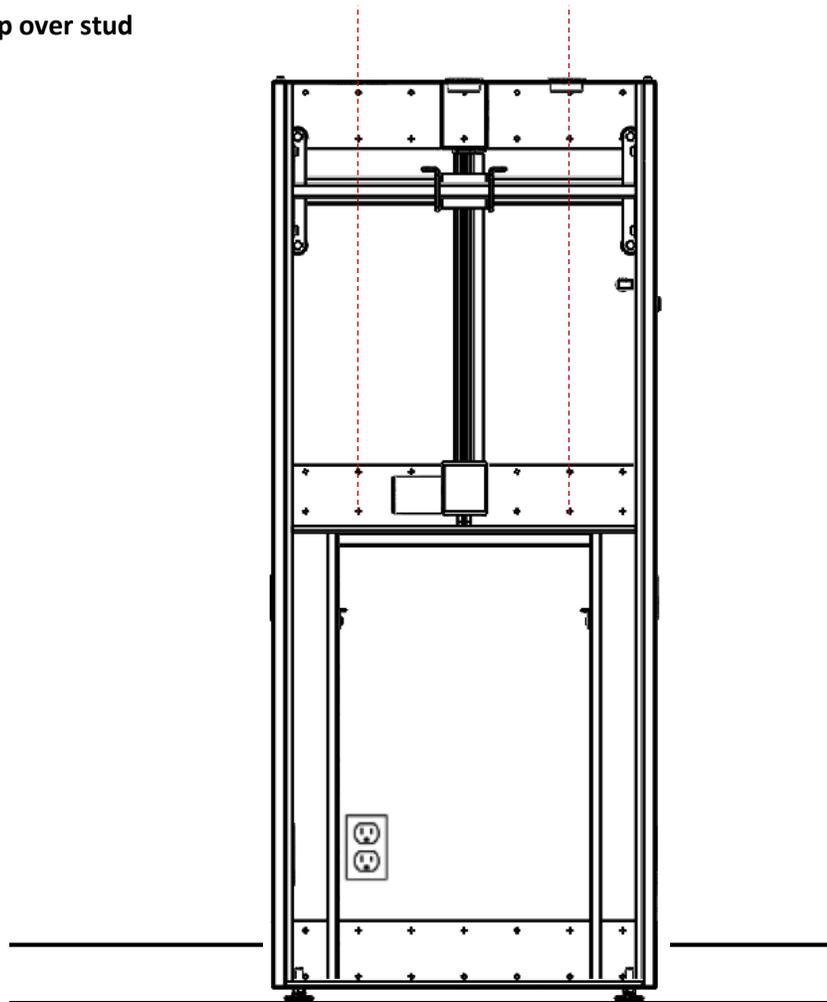

# LFT7000WM Wall mount lift stand






## 3 Drill 3" deep Holes


Drywall w steel stud

Drywall w wood stud

Masonry

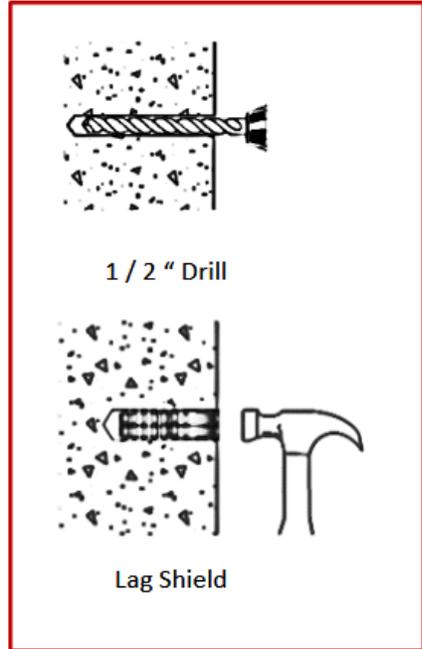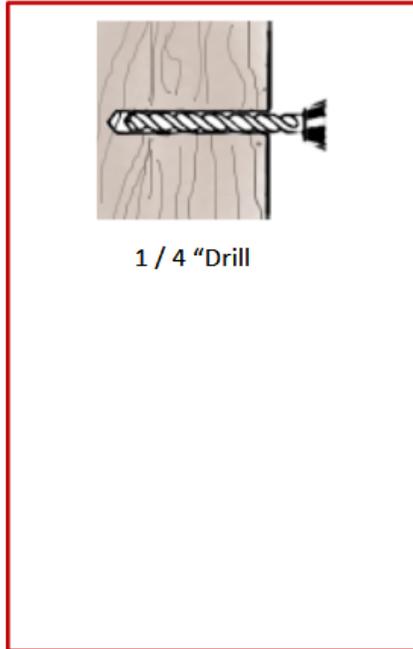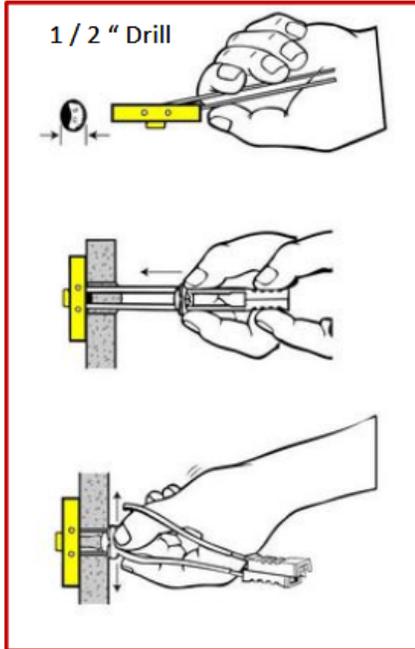


## 4 Install lag bolts.

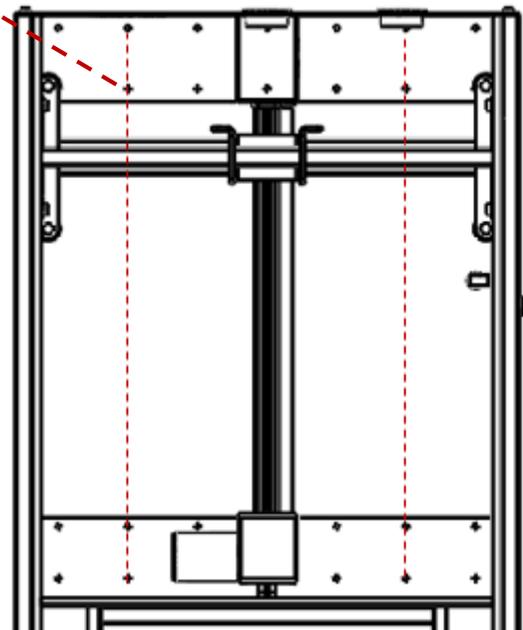


## LFT7000WM Wall mount lift stand

**5** Install rack equipment and run wiring.


Additional rack rails can be added.  
(3U rack rail part# RR3 ) 10-32 threads

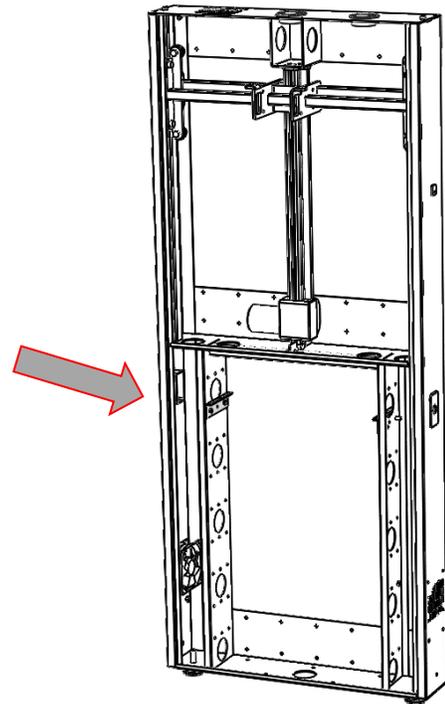

**6** Plug in and test run unit up and down.  
Then install and lock front top panel.

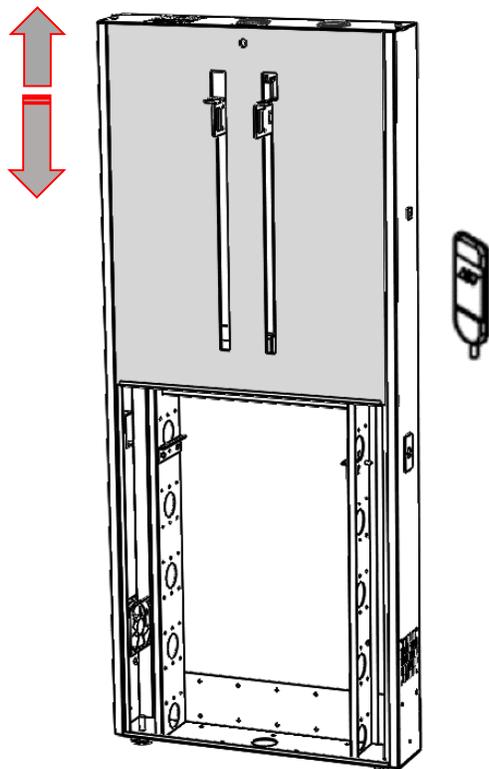


**7** Insert Tube into carriage openings.  
Center and tighten using M8 bolts.  
(Single version shown)

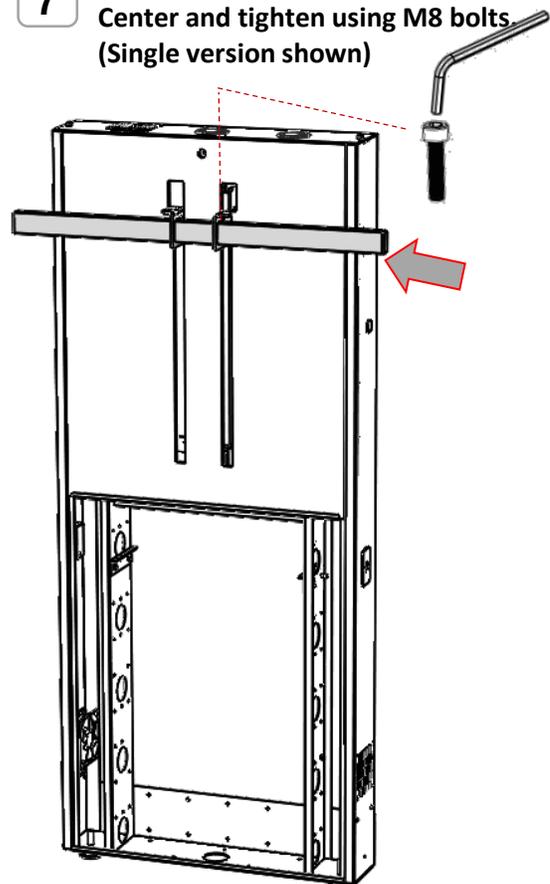


# LFT7000WM Wall mount lift stand

**8** Install TV brackets onto back of TV.

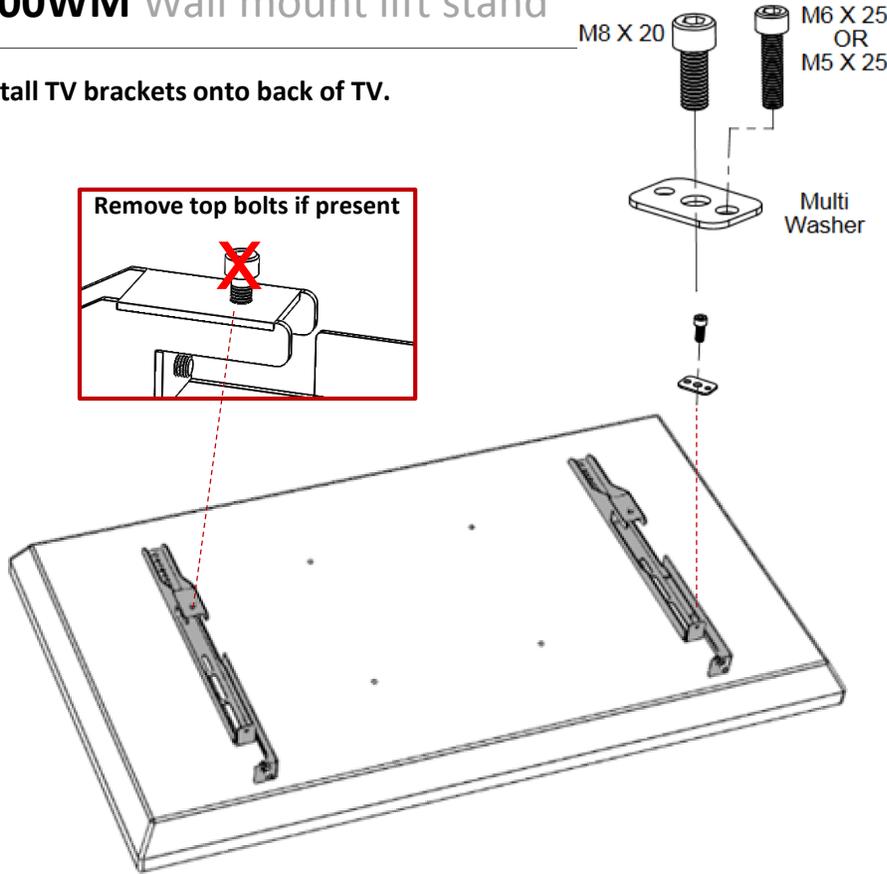


## Optional Spacer mounting

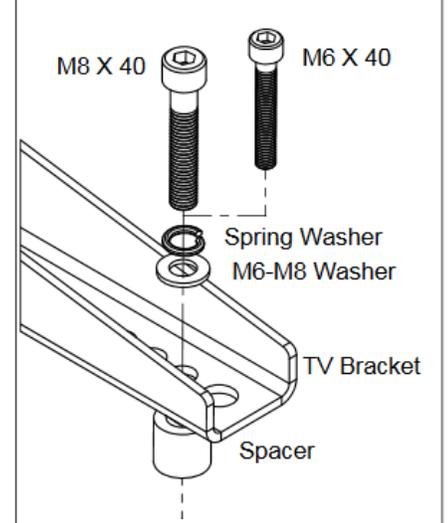


Spacer is used when the back of TV is not flat or the mount holes are sunk into the back of the TV. (Rarely used)

**9** Lower to bottom position  
To hang TV.  
See step 10.1 before  
proceeding.

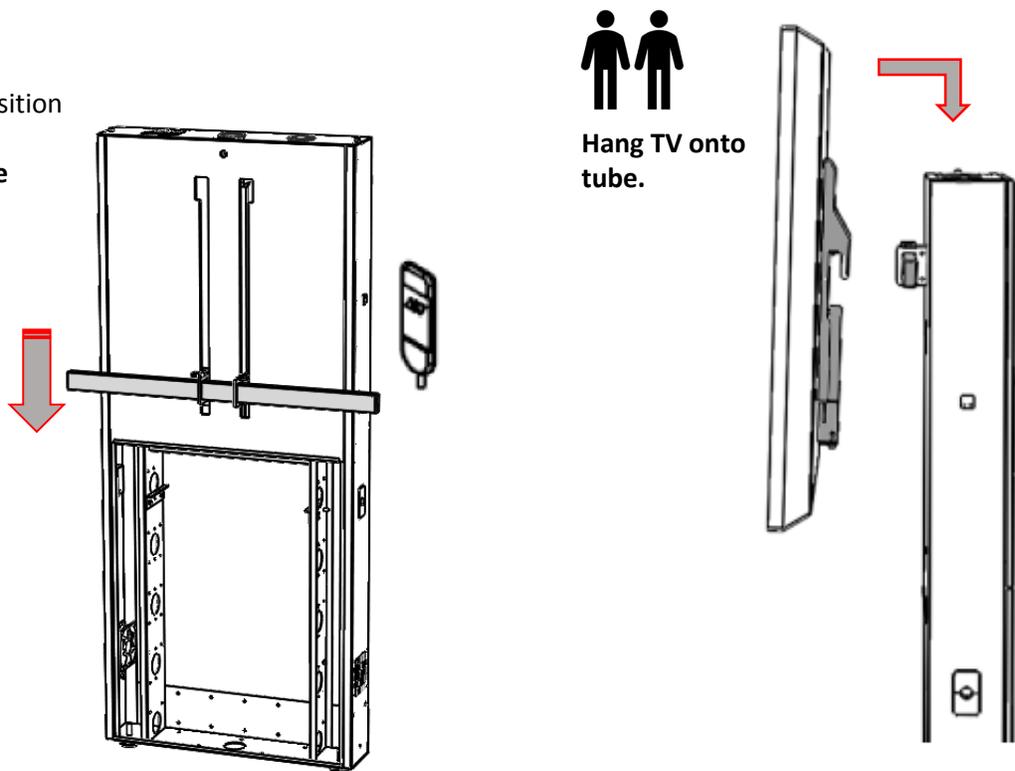

## LFT7000WM Wall mount lift stand

### 10 Lock TV onto tube.

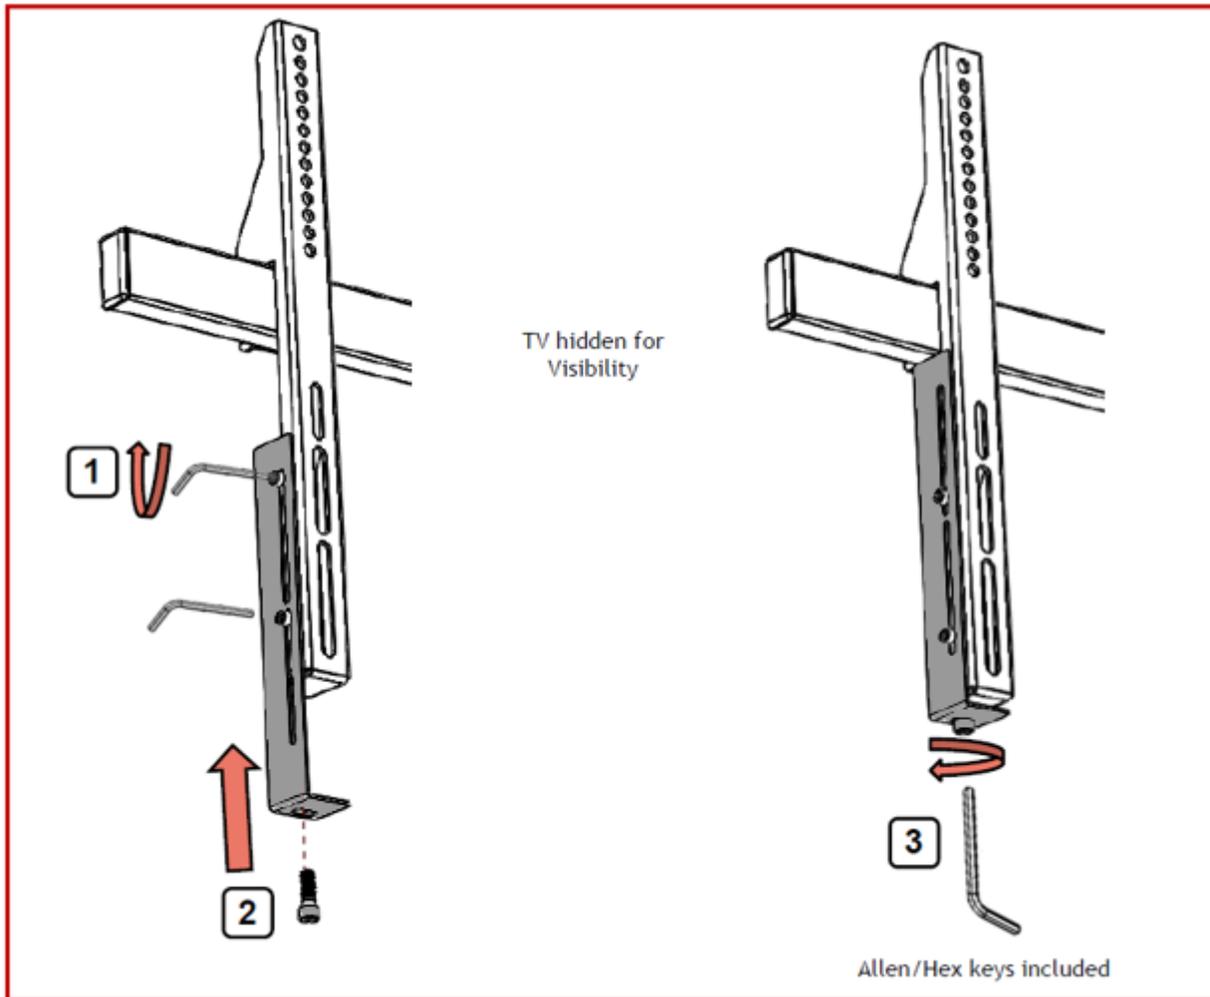

- 1** Its easier to do this step before hanging TV.  
Tighten both side bolts with Allen key until snug but bracket still slides up/down.
- 2** After hanging TV.  
Slide bracket up and hand tighten M8 bolt from bottom.
- 3** Tighten M8 bolt with Allen key until bracket is secure. (TV cannot be lifted or slide sideways)

## LFT7000WM Wall mount lift stand

- 11 Confirm all cable clearances when moving TV up and down. Reinstall and lock front panel.

End of Instructions.

