


KS90 Information Kiosk

Assembly Instructions.

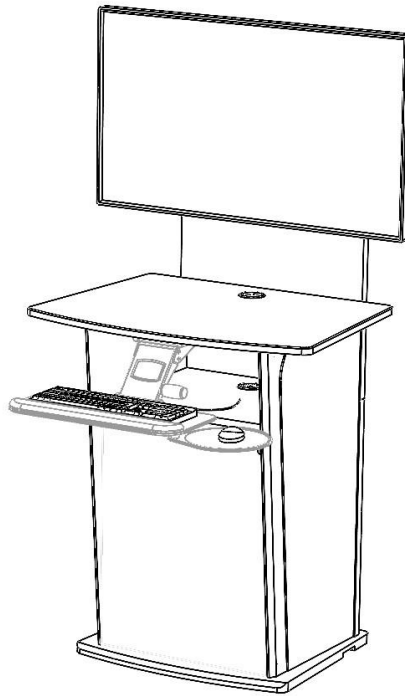

Sections

Instructions Summary:

1. Fasteners.
2. Hardware.
3. Assembly.

KS90 Information Kiosk


1

Fasteners Included:

X58 Metal Dowel Pins
X58 15mm Cams
X3 Wooden Dowels
X3 20mm Threaded Insert
X8 13mm Threaded Inserts
X11 ¼ 20 Hex Bolts
X12 5/8 Pan Head Screw



¼-20
Bolts

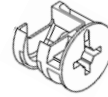

15mm
cam



Metal
Dowel
Pins




Wood
Dowel




5/8" Pan
Head
Screw

2


Hardware:

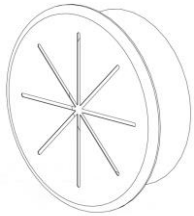


(x6) 2.375 Grommet

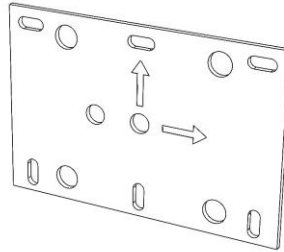


(x2) Mending Plate

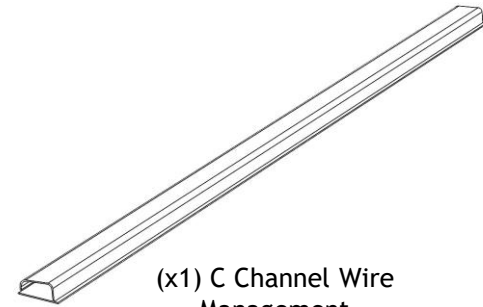


(x1) C Channel Wire
Management

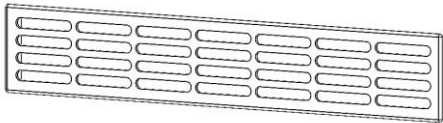

(x2) Vent

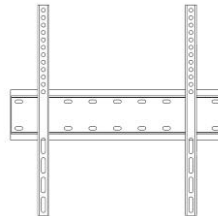

(x1) WM-2342

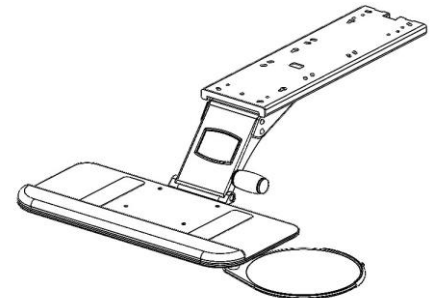


(x1) Keyboard Tray (if
applicable)

KS90 Information Kiosk

3



Step 1: Attach WM-3255 to the top of the loose panel

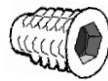

20mm
Threaded
Insert



1/4-20
Bolts

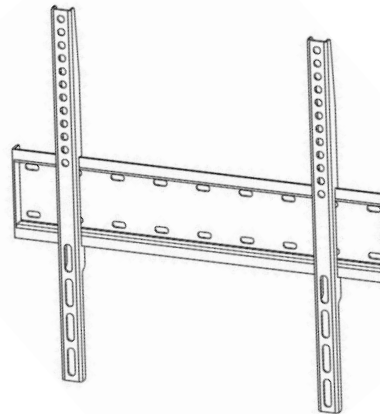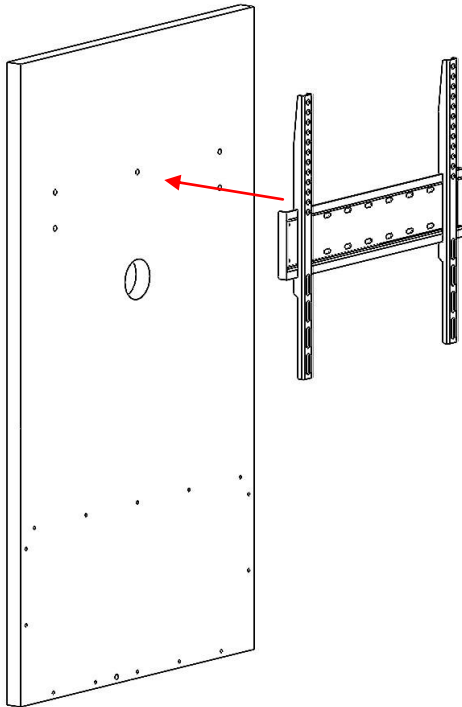


WM-2342


Step 2: Screw fasteners into locations



Metal
Dowel
Pins




Wood
Dowel

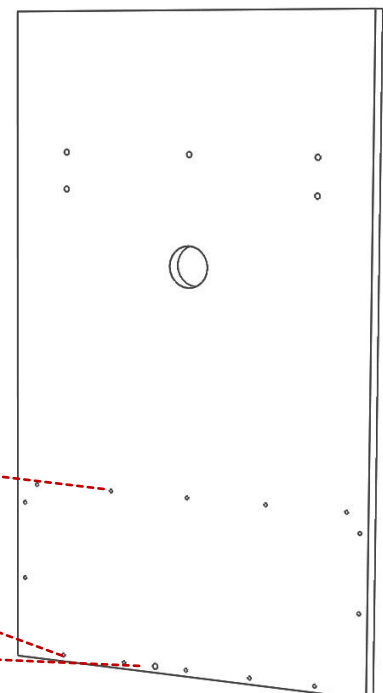


KS90 Information Kiosk

3


Step 3a: Place panel to body

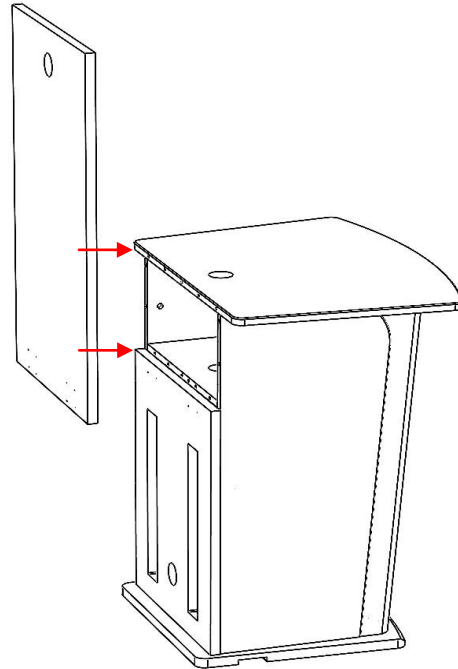

Step 3b: Secure mending plates to the back of the body


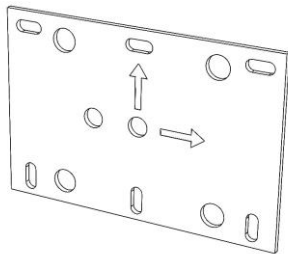


5/8" Pan
Head
Screw


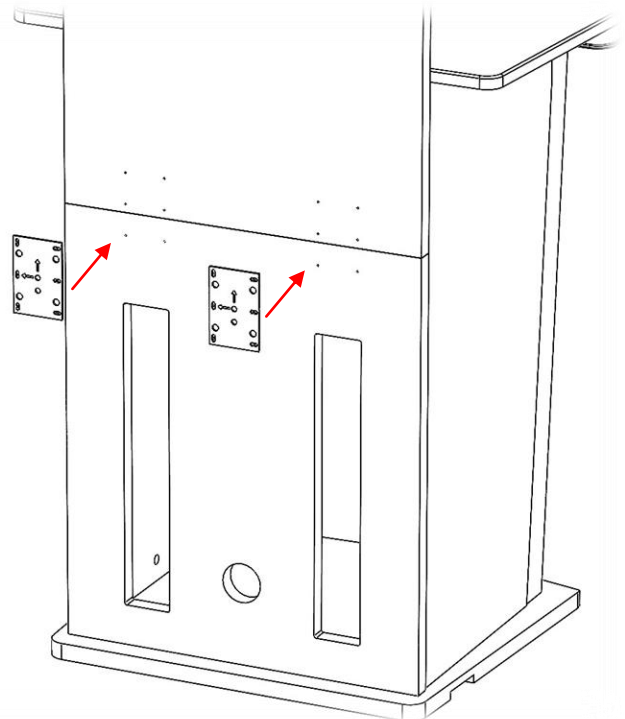


KS90 Information Kiosk

3 Step 4: Secure fasteners

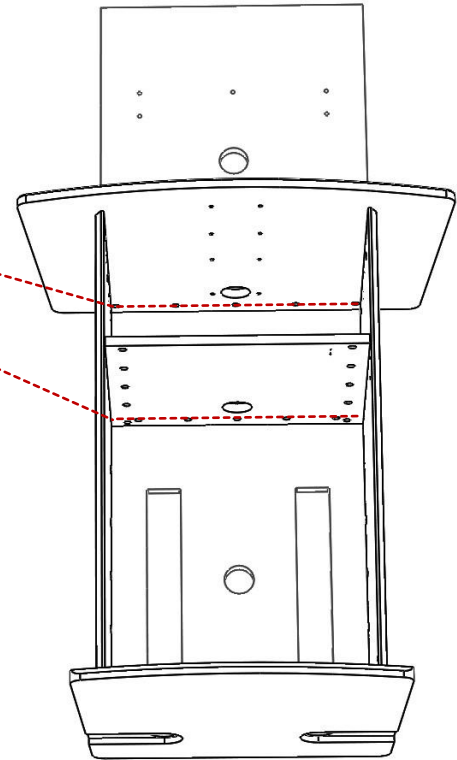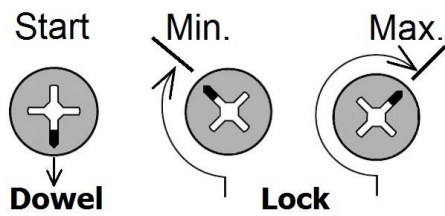

Step 5: Place vents & C Channel to the back of the body

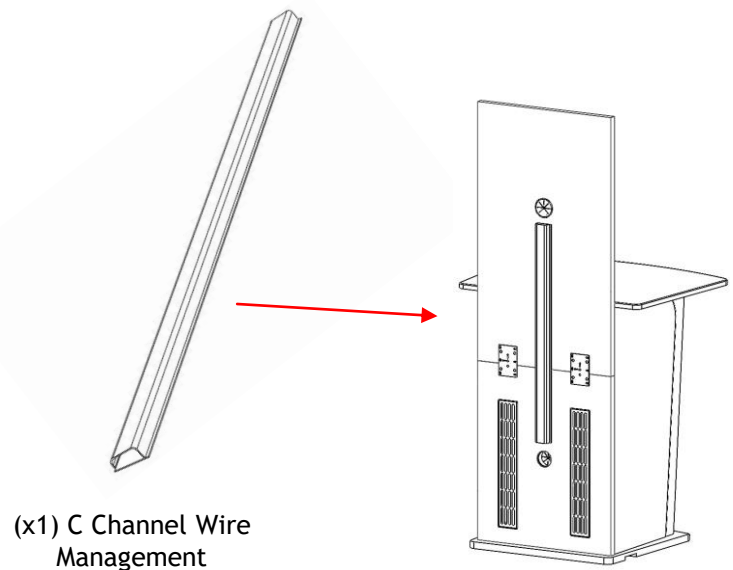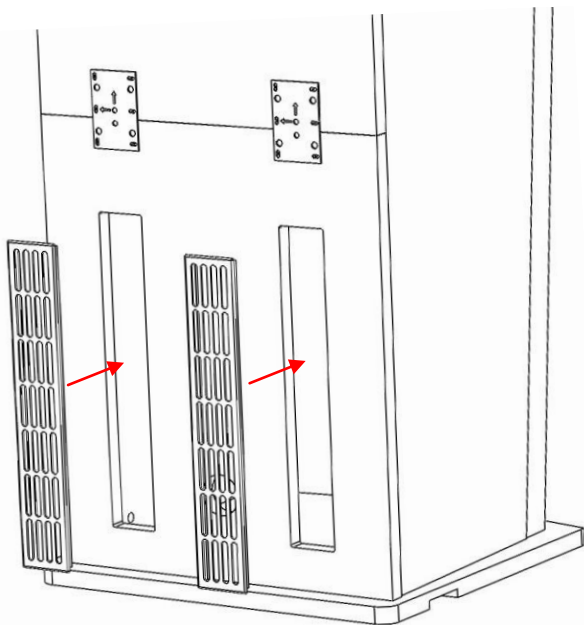

KS90 Information Kiosk

3

Step 5: Mount any electronics

